


Here are the DB9 install instructions for the Retevis RT9000D or the TYT 9000D radios!

NOTE: You MAY have to make the holes bigger on the DB9 connector due to different screw spacing on the radios!

Install video here:

<https://youtu.be/DC2IrN1lxXA>


Step 1:

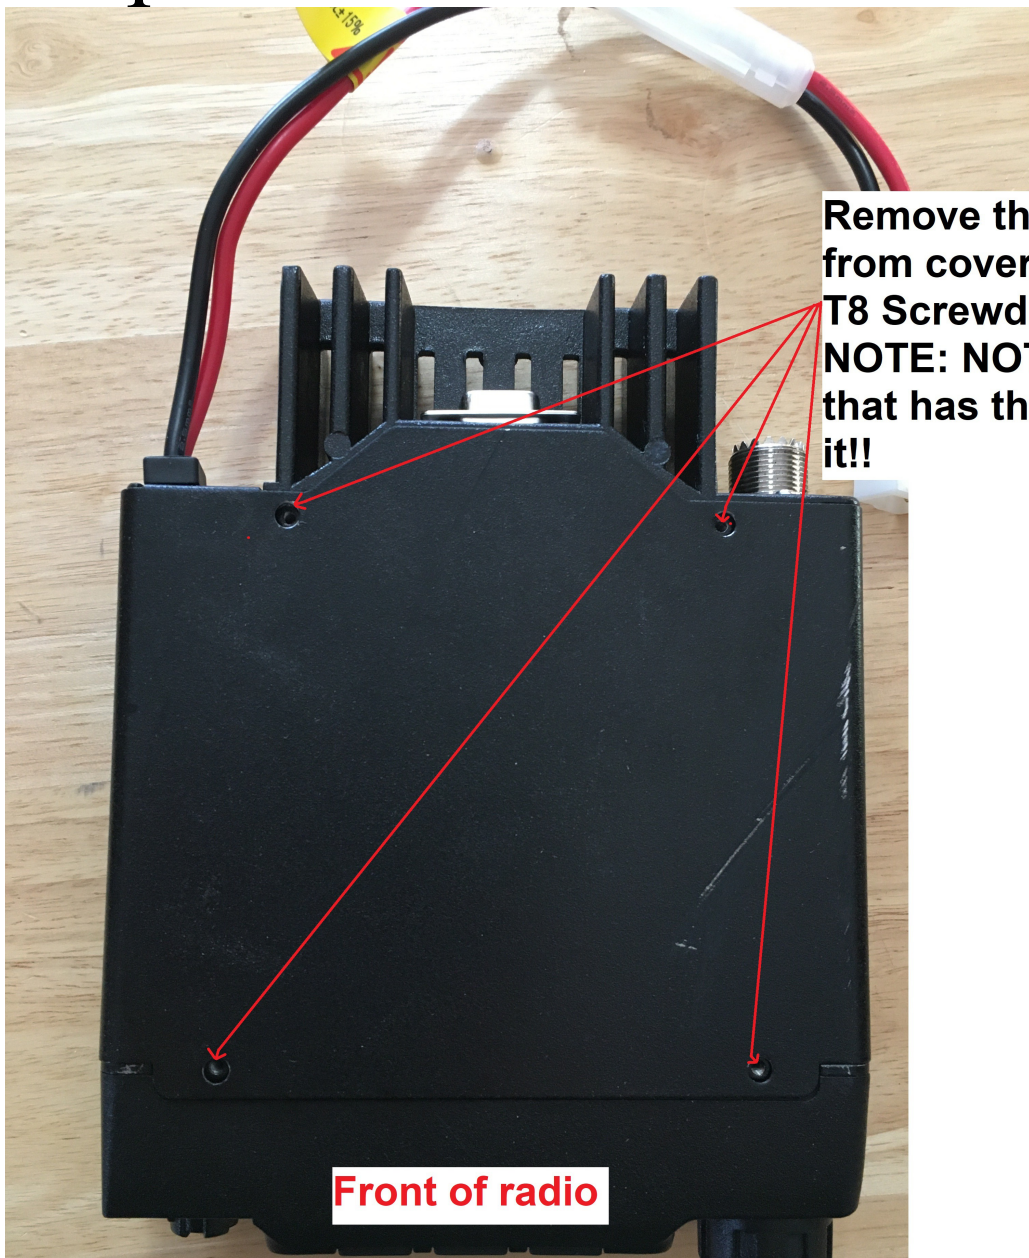

Remove the 4 screws
from cover using a Torx
T8 Screwdriver.
**NOTE: NOT the cover
that has the speaker on
it!!**


Front of radio

Step 2:

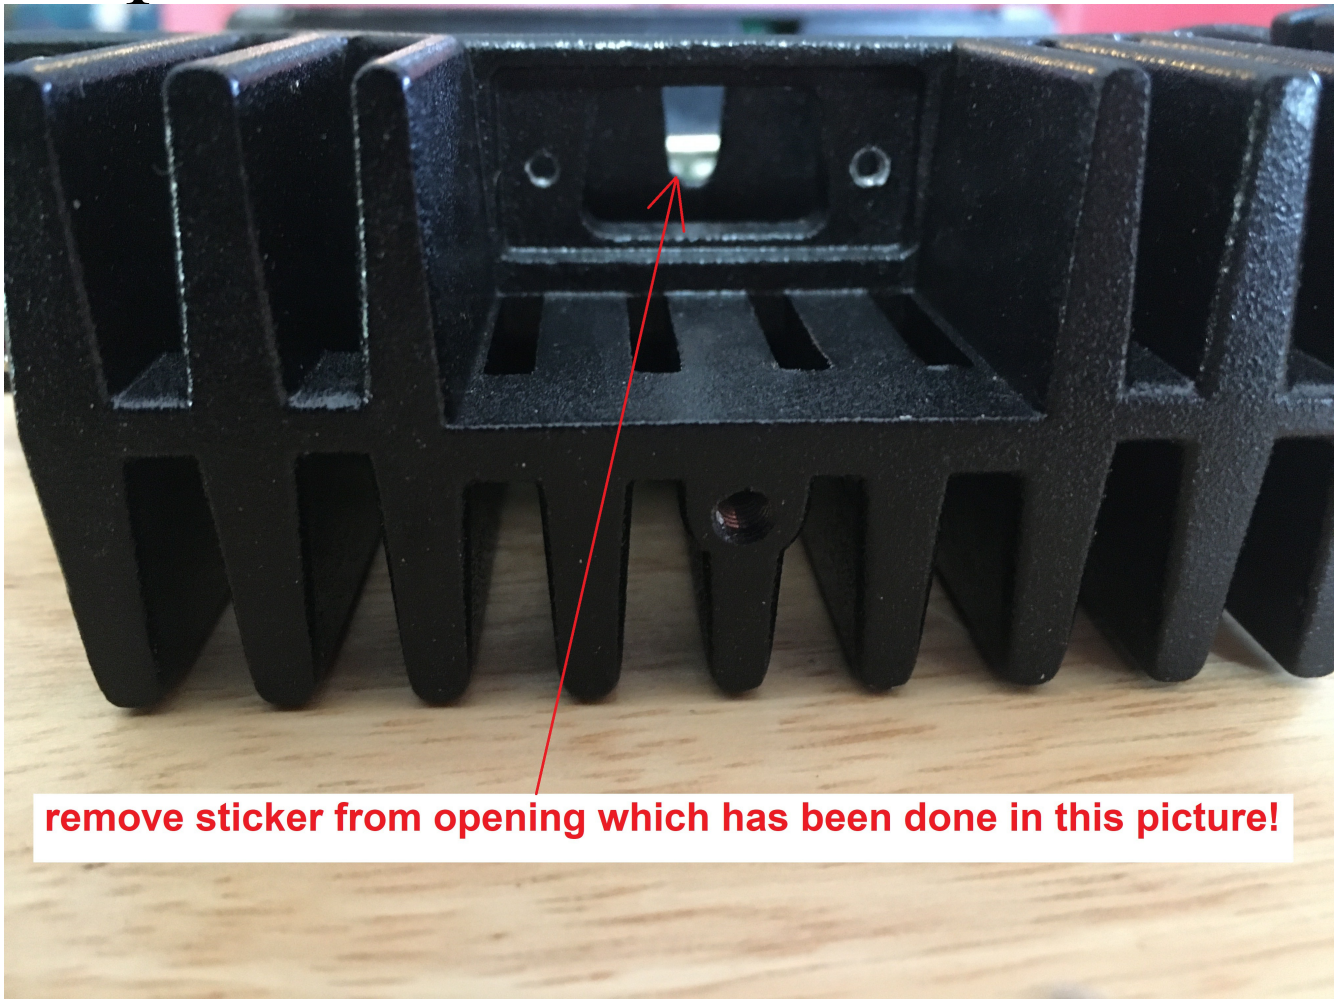


remove sticker from opening which has been done in this picture!

Step 3:

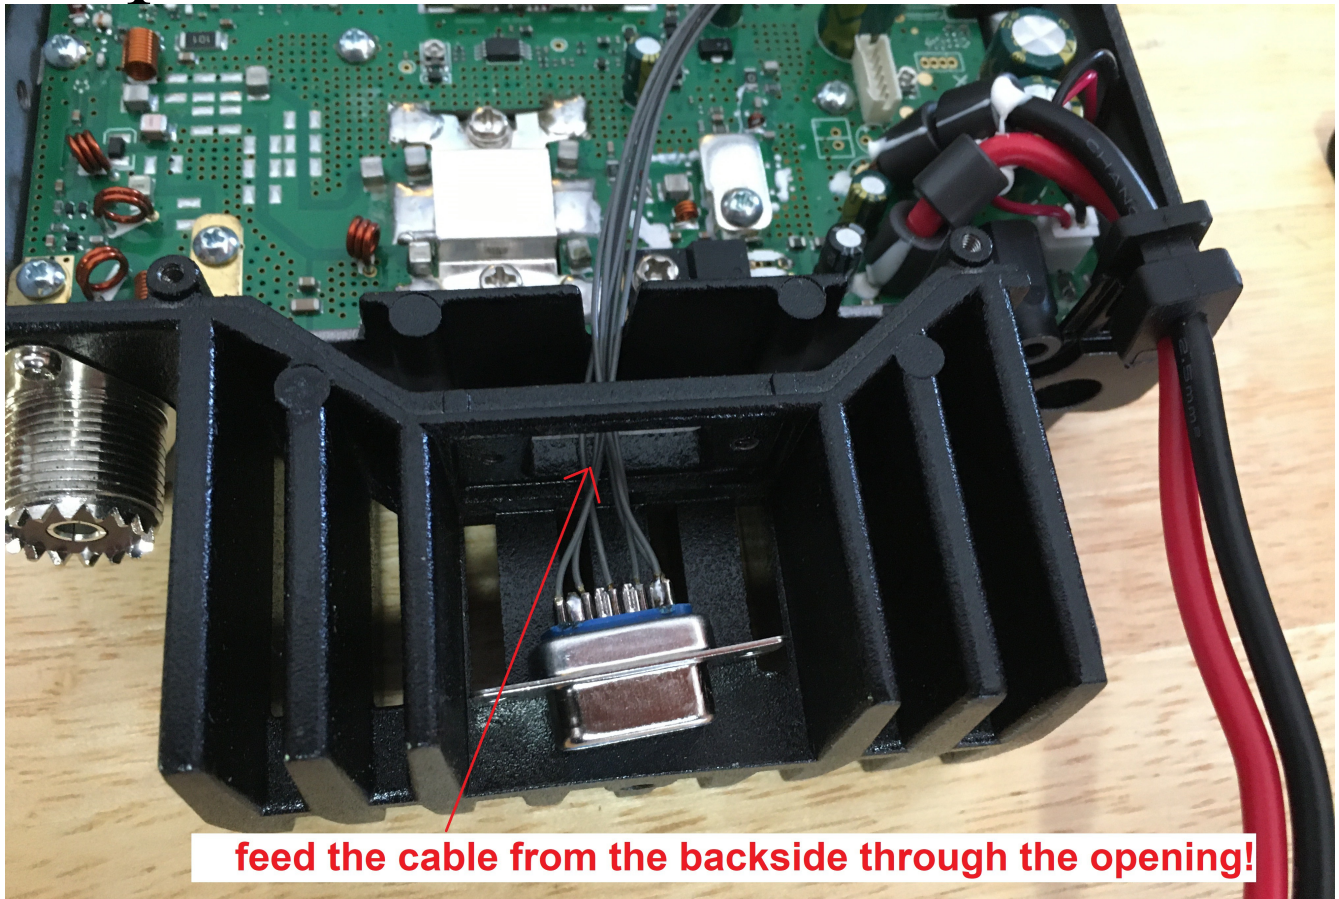

Step 4:

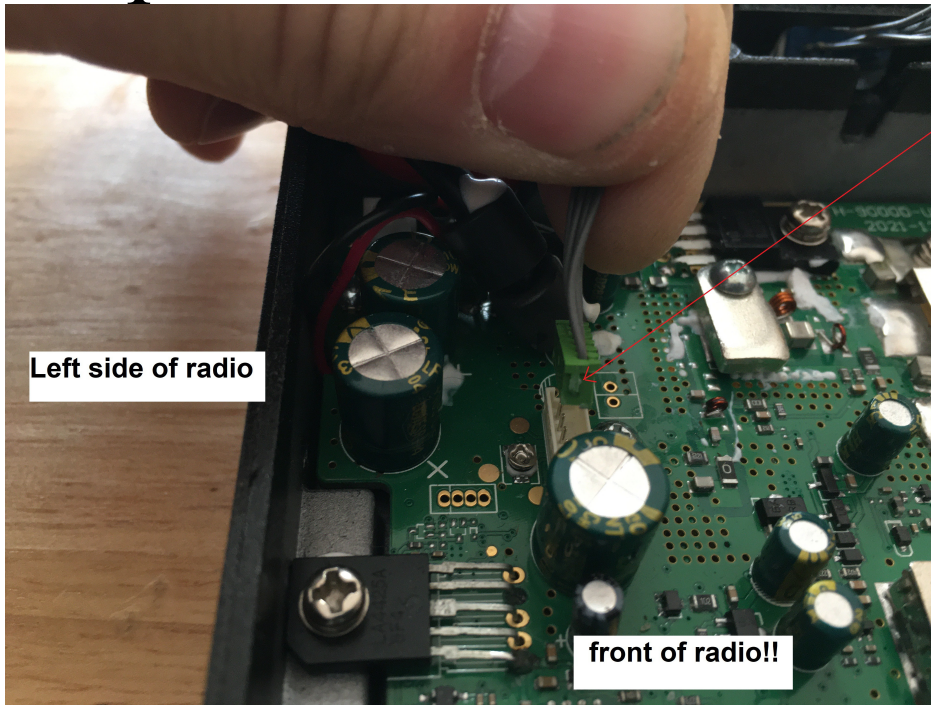


NOTE: the TAB on the plug!! the tab needs to be facing the way you see it in the picture!!

Left side of radio

front of radio!!

Step 5:

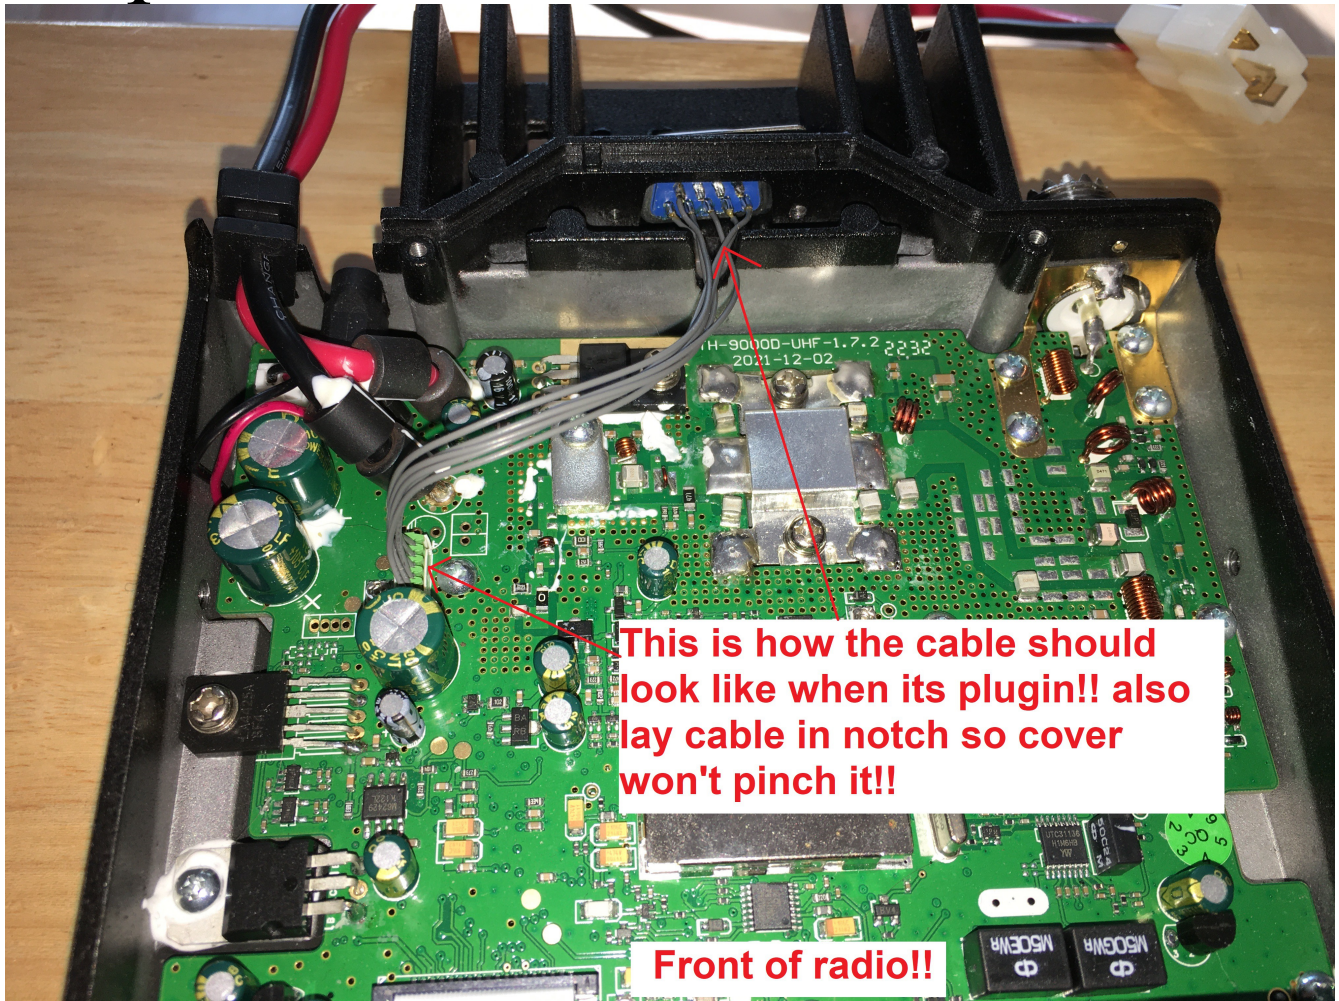

Step 6:

install the supplied screws onto the DB9 connector!!

**Note: The wide side
of the DB9 connector
goes DOWN!!**

Install cover back on and
you are done :)